


Instructions for Preparing a Printout to Create an ICC Profile

Printing the Patch Chart to Generate an ICC Profile

- Download the **TC9.18 RGB** file from the website: <https://www.falter.eu/wp-content/uploads/2026/04/TC9.18-RGB-barcode.zip>.
- Unzip and open the aforementioned file in Adobe Photoshop.
- If the following message appears, leave the file unchanged (!):

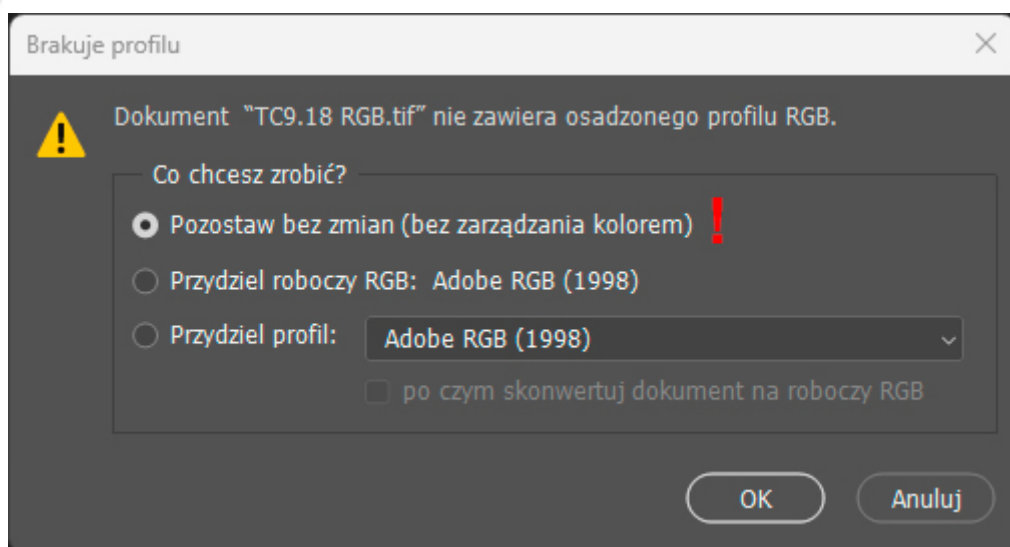


Falter Sp. z o. o.

ul. Poznańska 69, 62-045 Pniewy / Poland
telefon: +48 61 29 38 300, e-mail: biuro@falter.eu
www.falter.eu, www.inkjetsolution.eu

In Adobe Photoshop, select the **Print** command and choose the appropriate settings in the dialog box:


- In the **Color Handling** section, select **Printer Manages Colors (1)**.
- **Color Conversion Method** should be **Relative Colorimetric (2)**.
- Check that the option **Scale to Fit Media** is **not** selected (!).
- Enter the printer settings by clicking the **Print Settings** button (3).

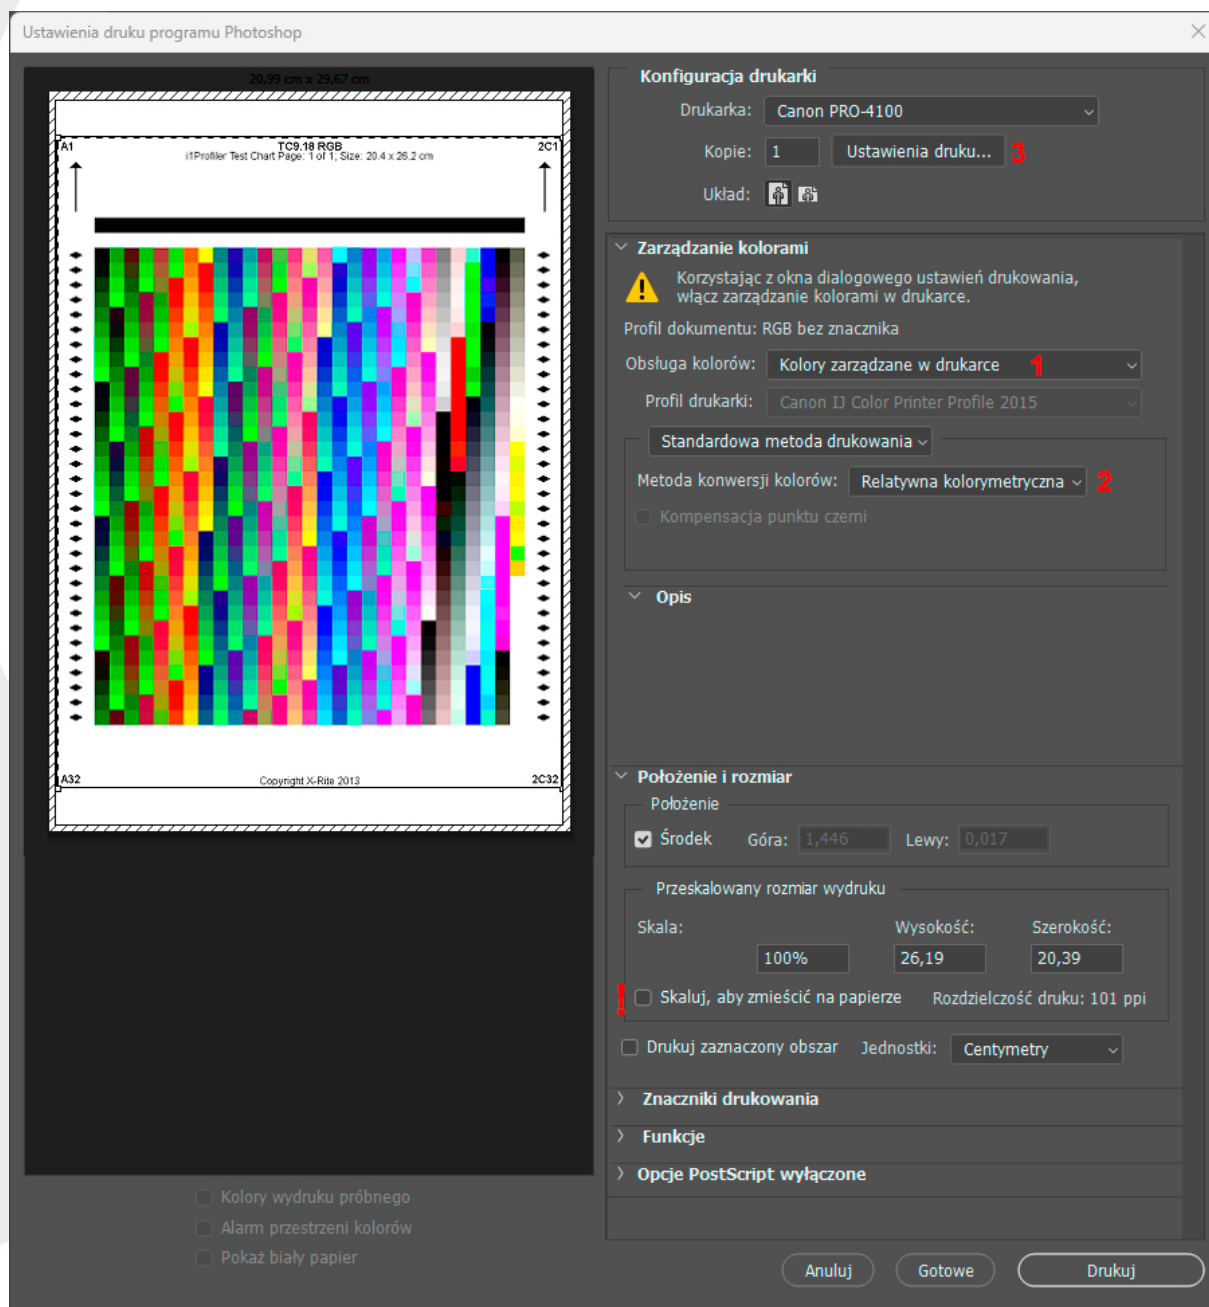

Falter Sp. z o. o.

ul. Poznańska 69, 62-045 Pniewy / Poland
telefon: +48 61 29 38 300, e-mail: biuro@falter.eu
www.falter.eu, www.inkjetsolution.eu

- Set the **Media Type** to match the paper loaded into the printer (1).
- If the correct media type was selected when loading the paper, you can click the **Get Information** button to retrieve it from the printer (!).
- Select the **Highest** print quality (2).
- Go to **Color Settings** by clicking the **Color Settings** (3) button.

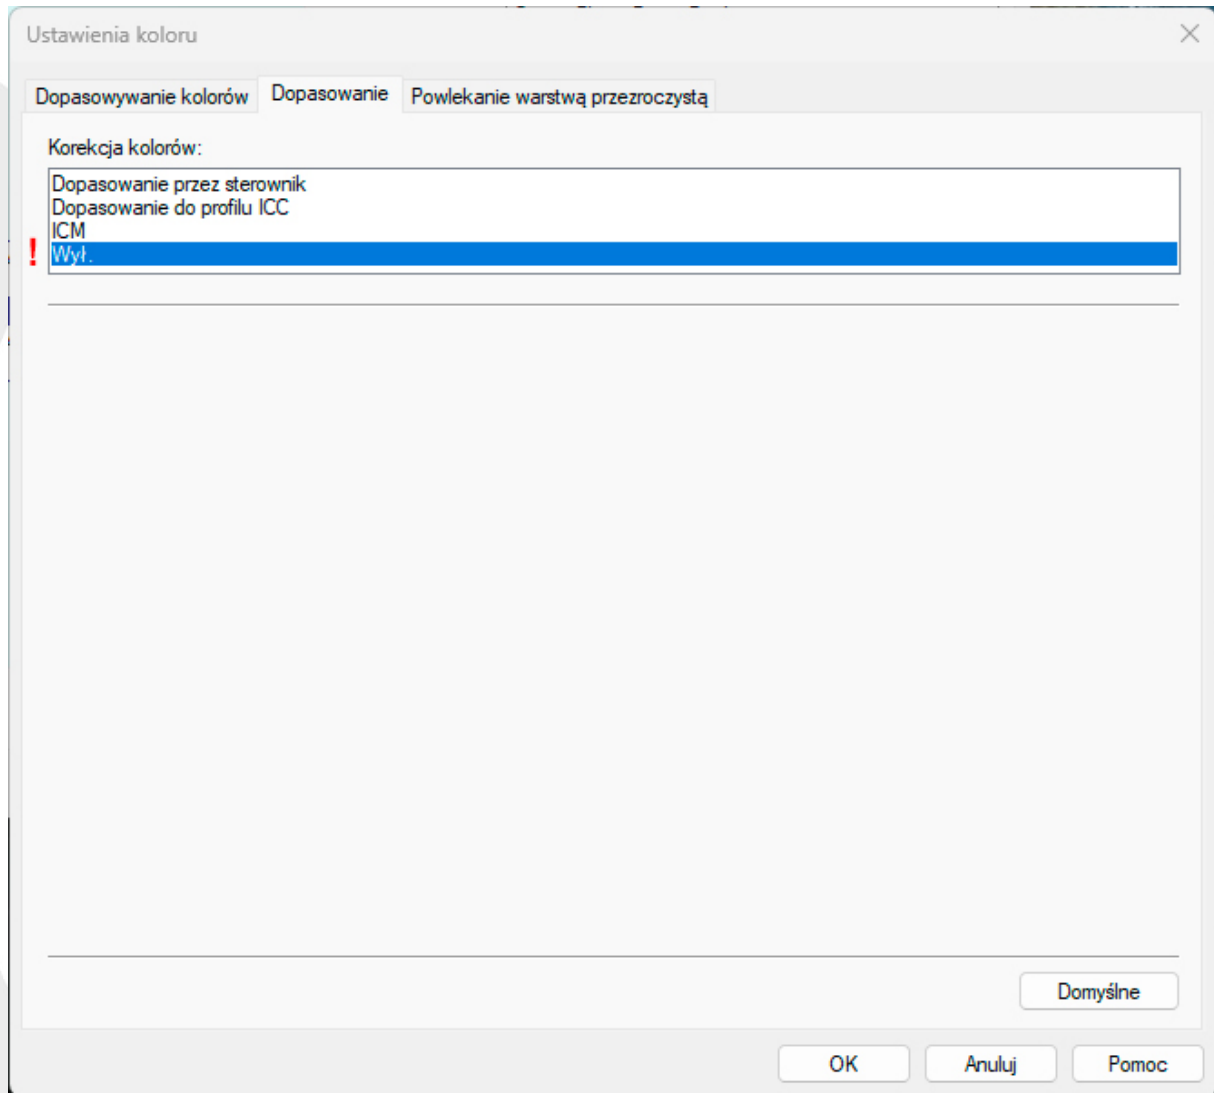


In the **Adjustment** tab, select the **Off** option (!).

Return to the main driver window and select the **Page Setup** tab (4).

Falter Sp. z o. o.

ul. Poznańska 69, 62-045 Pniewy / Poland
telefon: +48 61 29 38 300, e-mail: biuro@falter.eu
www.falter.eu, www.inkjetsolution.eu

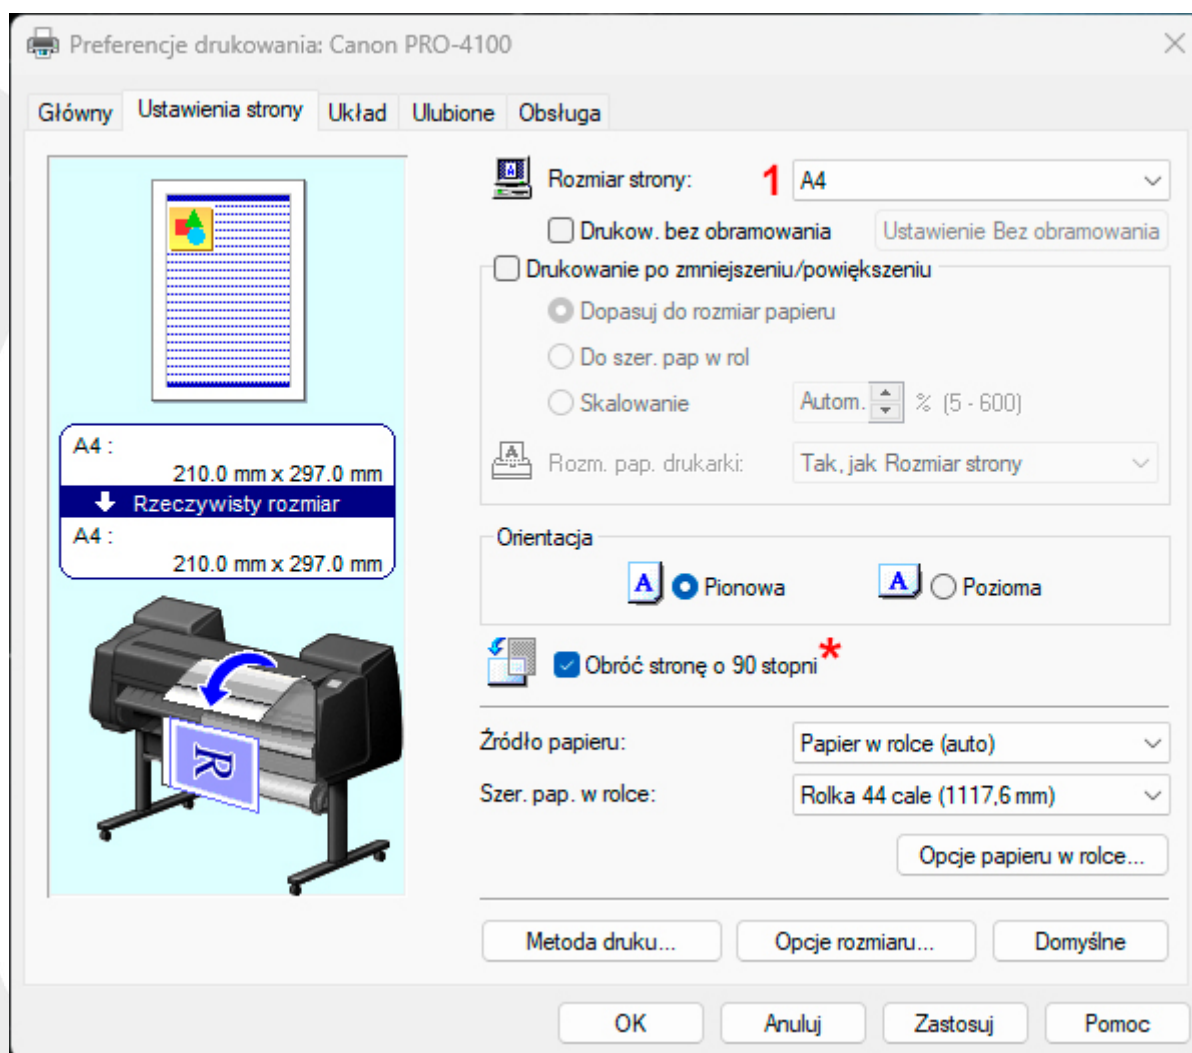

Select the **A4** format in the **Page Size** selection menu (1).

To save paper, you can check the option **Rotate 90 degrees** (*).

Epson Printer Driver Settings

Preferencje drukowania: EPSON SC-P7000 Series

Main Page Layout Utility

Select Setting: Current Settings Save/Del...

Media Settings

1 Media Type: Premium Luster Photo Paper (260) Custom Settings...

2 Color: Color Photo Black Ink

3 Print Quality: Max Quality Paper Config...

4 Mode: ☐ Automatic ☒ Custom

! Off (No Color Adjustment) Advanced...

Paper Settings

Source: Roll Paper Roll Paper Option...

Size: 5 A4 210 x 297 mm User Defined...

☐ Borderless ☐ Save Roll Paper

☐ Print Preview

☐ Layout Manager

Cartridge Option
Light Light Black

Reset Defaults Version 6.80

OK Anuluj Zastosuj Pomoc

- Select the **Media Type (1)** appropriate for the paper loaded into the printer.
- In the **Color** option, check if **Color** print is selected (2).
- In the print quality menu, select the **Max Quality** available (3).
- In the **Color Management Mode (4)** selection menu, select the **Custom** option and from the dropdown list, select **Off (No Color Adjustment) (!)**.
- Select the **A4** format for the page size (5).

Rules for Describing Printed Color Charts

On the back of each printout, add the following information:

- **Printer Model**
- **Type of ink used** (e.g., OEM, Solution)
- **Substrate type** (e.g., Solution Luster RC 255)
- **Email address** to which the completed profiles should be sent.

Please package the finished printouts in an A4 envelope, **necessarily stiffening it** with cardboard inserts, for example, and send it to the address:

Falter Sp. z o.o.

ul. Poznańska 69

62-045 Pniewy

With the note: **Profile ICC - Do not bend!!**

Falter Sp. z o. o.

ul. Poznańska 69, 62-045 Pniewy / Poland
telefon: +48 61 29 38 300, e-mail: biuro@falter.eu
www.falter.eu, www.inkjetsolution.eu